


Installation guide



Electric expansion valve AKVA 10-n (n = 1-8)

068R9546

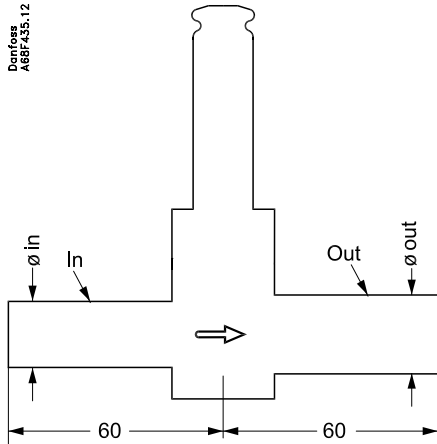






AKVA 10 -	1, 2, 3, 4, 5, 6	7,8
In	$\frac{3}{8}$ " ($\varnothing_{in} = 17.2$ mm)	$\frac{1}{2}$ " ($\varnothing_{in} = 21.3$ mm)
Out	$\frac{1}{2}$ " ($\varnothing_{out} = 21.3$ mm)	$\frac{3}{4}$ " ($\varnothing_{out} = 26.9$ mm)

068R9546

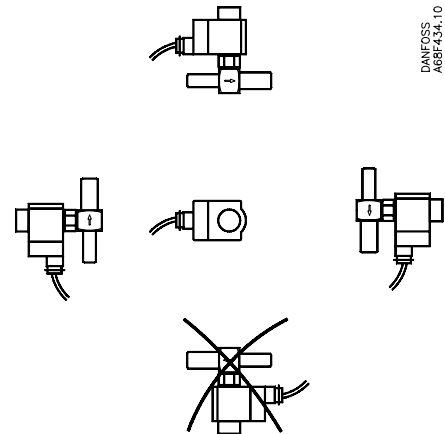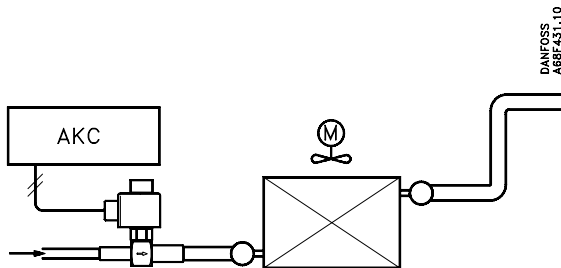

n	Dyse, Düse, Orifice, Orificio	kW	TR
	Best.nr. Code no. Bestell-Nr. N° de code Núm. de código		
1	068F0526	4.0	1.1
2	068F0527	6.3	1.8
3	068F0528	10.0	2.8
4	068F0529	16.0	4.5
5	068F0530	25.0	7.1
6	068F0531	40.0	11.4
7	068F0532	63.0	18.0
8	068F0533	100.0	

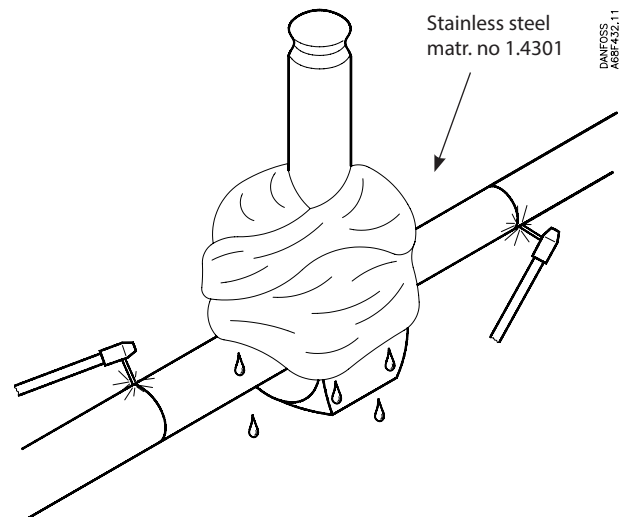

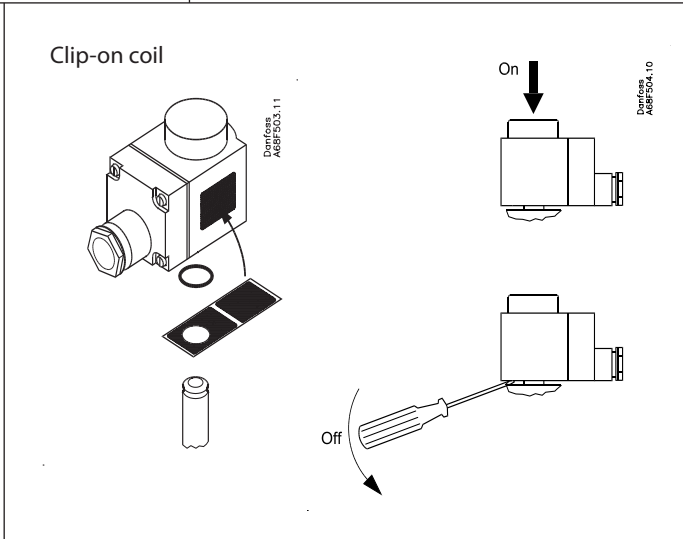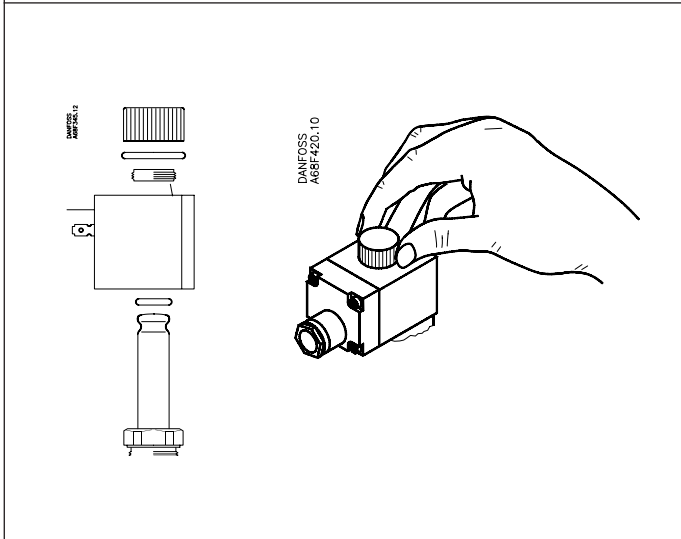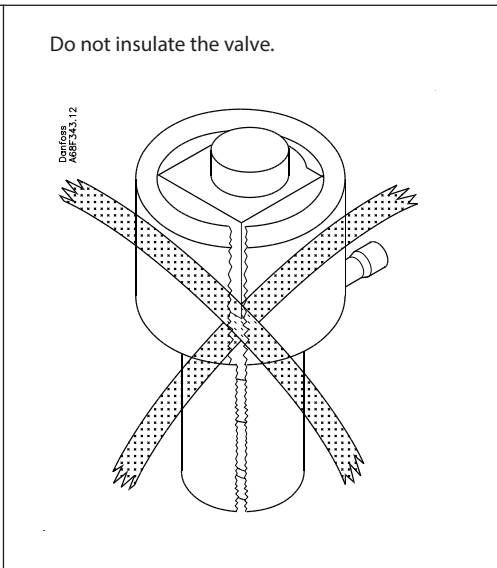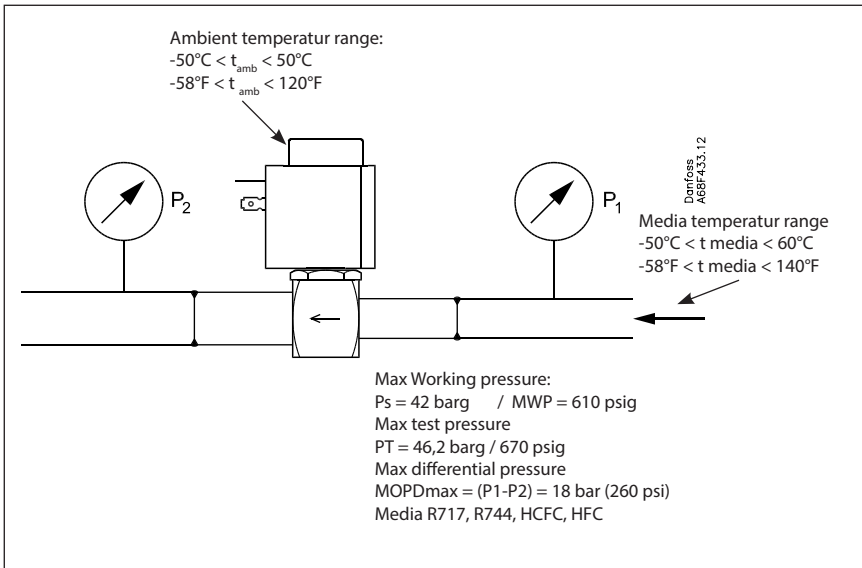



Pakningen skal skiftes, hvis ventilen adskilles

The gasket must be exchanged, if the valve is dismantled

Bei Zerlegung des Ventils muß die Dichtung ausgewechselt werden.

Changer le joint chaque fois que la vanne est démontée

Es preciso cambiar la junta si se desmonta la válvula

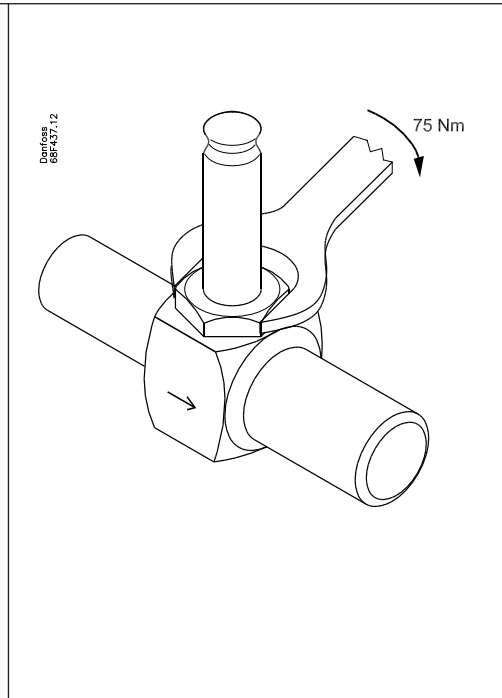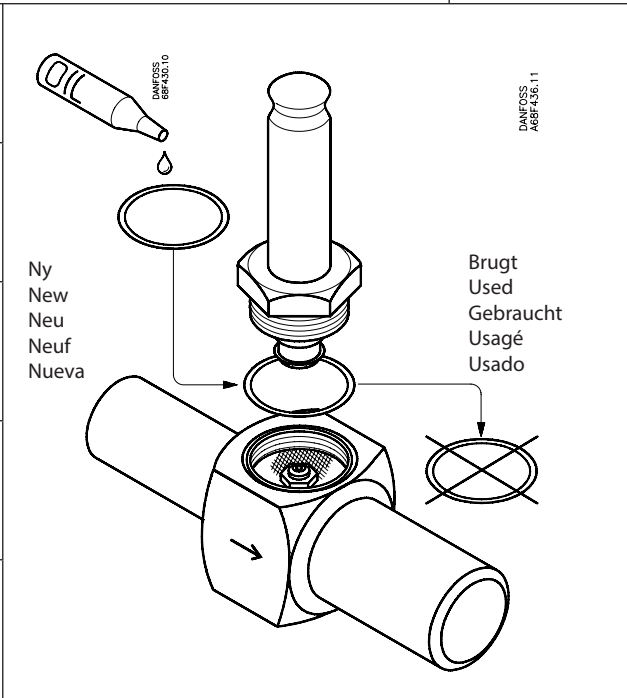

Danfoss can accept no responsibility for possible errors in catalogues, brochures and other printed material. Danfoss reserves the right to alter its products without notice. This also applies to products already on order provided that such alterations can be made without subsequent changes being necessary in specifications already agreed. All trademarks in this material are property of the respective companies. Danfoss and the Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.